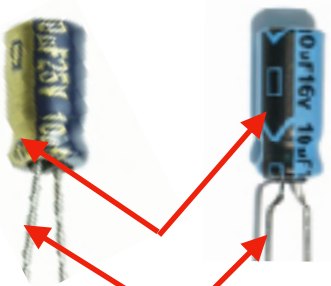


Installation order in Red

Hypnotic Components Sorting sheet and installation order

Do not take this sheet,
please leave it on the table

1 and 2 R1 and R4 Red-Red-Brown-Gold 	3 R7 Brown-Grey-Red-Gold 	4,5,6 R3,R6 and R9 Brown-Green-Red-Gold 	7,8,9 R2,R5 and R8 Red-Red-Yellow-Gold 	10,11,12 IC Sockets -Qty 3  Note: the notch goes to the left side of the board.
Use the lead bending tool to bend the resistor leads to a distance of 10mm				

13,14,15 Electrolytic Capacitor Qty 3 (May be blue or black in colour). “-ve” lead must go in the “-” hole (Oval shaped hole). It must also be laid down flat on the board  -ve lead has the stripe on it with a “-” in it, and has a shorter pin	16,17,18 Red, Orange (or yellow), and Green Led's - 3 Get a leader to check the LED before you solder it in  Flat side with the short lead “-ve pin” goes to the left, Check the pins on the back of the board to ensure you have it in the right way round 	19 7555 IC's, Batteries Ask a leader to check your soldering, plug in the IC's and test the board. If all is ok, they will give you the Battery holder and batteries. 	20 Battery Holder, Write your name and group on it and get the protective tape put on. Ensure you remove the top layer of the double sided tape, before soldering it in. 
--	---	--	--